

DIGITAL SCALE

MODEL 1479

SPECIFICATION


MODEL 1479 PROFESSIONAL-MINI

Capacity & Graduation:
Gram Version

0-50g by 0.1g
50-100g by 0.2g

Power Supply: 3pcs. alkaline batteries (LR44)

NAME OF PARTS

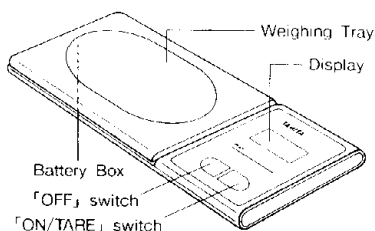

HOW TO USE IT

- Place the unit on a hard, even surface and keep at horizontal level.
- Push ON/TARE switch. The unit displays "8888" for about 2 seconds then goes to "0.0". It's ready for weighing.
- Put the object on the unit, then display shows the weight. When load surpasses the capacity of 100g, "EEEE" are shown on display. (over loaded)
- Tare System
After ON operation put a dish or bowl on the tray and push ON/TARE switch again and scale shows "0.0". Add your first ingredients and weight. Additional ingredients can be weighed individually by re-depressing ON/TARE switch to "0.0" each time until full capacity
- Automatic Power Off
After load is stabilized and measuring is completed unit automatically shuts itself off in 3 minutes. (Saving battery life)
- Battery Replacement
When battery power lowered display shows "LO" Push OFF switch and replace batteries immediately.

CAUTION

When heavy weight of more than 100g is loaded or hard shock is given to the unit, it may happen that display doesn't show "0.0". In this case push ON/TARE switch and make sure that display shows "0.0" and repeat your weighing once more. When you don't use the scale for long time, take out batteries and keep it in stock. Leakage of liquid might damage of the unit.

CARE AND INSTRUCTION

The unit is a precision instrument and specially adjusted and manufactured for correct measuring. You are requested to use the unit as per following instructions:

- Do not dismantle the unit.
- This unit should be operated in the circumstances of no vibrative and of no direct sun shine.
- Rapid change of ambient temperature affects the accuracy of the unit even though the unit compensates its accuracy about 2 hours after changing of circumstances.
- Take care not spill water or medical liquid to the unit. Periodically wipe the unit with a damp cloth.
- Keep the unit always away from heating appliances such as oven, electric stove and etc.
- Keep the unit in the cool, dustless and dry circumstances and take the batteries out from it in case of longer custody.
- Check and replace your batteries before returning your scale for service. If you find service is still required, remove the batteries and repack the unit in its original carton and packing materials for transportation.
- When you keep it in stock don't put anything on the tray

TANITA

GLHMAN

DIGITALWAAGE

MODELL 1479

TECHNISCHE DATEN


MODELL 1479 PROFESSIONAL-MINI

Kapazität und Einteilung:
Grammausführung

0-50g 0.1g-Einteilung
50-100g 0.2g-Einteilung

Betrieb: 3 Alkaline Batterien (LR 44)

TEILEBEZEICHNUNG

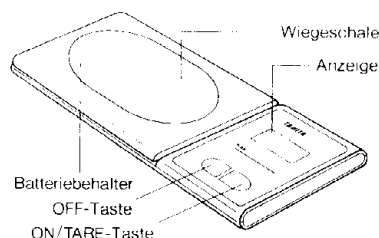

GEBRAUCHSANWEISUNGEN

- Stellen Sie die Waage auf eine stabile Fläche und halten Sie sie waagrecht.
- Drücken Sie die ON/TARE-Taste. Auf der Anzeige erscheint zwei Sekunden lang "8888" und dann "0.0". Die Waage ist dann betriebsbereit.